

Button Functions



UP

Used to wake thermostat and increase temperature.



DOWN

Used to wake thermostat and decrease temperature



MODE

Used to wake thermostat, change mode.

**** Note:** Hold mode button down for five seconds to change from Fahrenheit to Celsius or Celsius to Fahrenheit. *The backlight will turn off after 5 seconds.

* For systems equipped with a backlight.

Operation Chart

The chart below shows the system functions with both COOL ONLY and HEAT/COOL RVP thermostats. After the entire air conditioning and heating system is installed, check each position's function. The Cool Only thermostat will not have heat functions.

	Mode	Call	Operation
1	Fan Low	No	GL-Fan Low (Gray) energized
2	Fan Hi	No	GH-Fan High (Green) energized
3	Cool On High	No	GH-Fan High (Green) energized
4	Cool On High	Yes	GH-Fan High (Green) energized, Y-Compressor (Yellow) energized
5	Cool On Low	No	GL-Fan Low (Gray) energized
6	Cool On low	Yes	GL-Fan Low (Gray), Y-Compressor (Yellow) energized
7	Cool Auto low	No	No function occurs
8	Cool Auto low	Yes	GL-Fan Low (Gray) energized, Y-Compressor (Yellow) energized
9	Cool Auto High	No	No function occurs
8	Cool Auto High	Yes	GH-Fan High (Green), Y-Compressor (Yellow) energized
9	Heat Gas	No	No function occurs
10	Heat Gas	Yes	W-Furnace (White) energized



RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204

Web: www.rvcomfort.com